

Installation Instructions

Surface Preparation

Use lint free cloth with glass cleaner or isopropyl to clean surface. Make sure surface is dust free.


Temperature Requirement

Air & application surface must be at least 55 degrees F.

Application Instructions



Place graphics & hinge with tape.

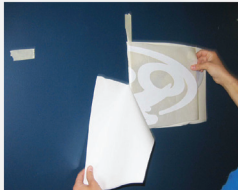

Remove paper up to hinge & apply with squeegee



Apply second half of graphic and remove transfer tape.



qscdesign.com